

**Attention**




Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

**Note:**



Tips for facilitation of operation, control and adjustment, as well as maintenance work.

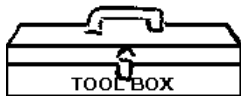

**TOOLS REQUIRED:**  
 Phillips Screwdriver  
 4mm Hex Key Wrench

**PARTS LIST**

<u>Index</u>	<u>Description</u>	<u>Qty.</u>
1	Windscreen, Quantum Hardcoated Polycarbonate	1

**INSTALLATION**



**Retain all fasteners and front plates, as they will be reused.**

1. Remove outer plates and stock windshield. **(Phillips Screw Driver)**

2. Place VStream Windshield into position on motorcycle. Install windshield using stock screws and front plates. **(Phillips Screw Driver)** Tighten the screws firmly. **Do not over tighten**



The VStrom has a height adjustable mount plate. The National Cycle N20213 will function in any position. To change mount plate to higher position remove the Hex Screws and Washers from 4 locations, slide mount plate upward and re-install hardware. **Tighten firmly, do not over tighten (4mm Hex Key Wrench). Figure 1**



Final adjustment. Check clearance at full fork lock left and right. VStream is designed to clear mirrors. Adjust mirrors if necessary. **Figure 2**



Figure 1



Figure 2

## MAINTENANCE

**Cleaning:** Wash with a clean soft cloth, plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Do not use rain protective products on the screen due to the solvent action of the alcohol in these products. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

### **WARNING**

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycle's instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.



#### **National Cycle 3-Year Limited Warranty**

**Register your windshield on Line at: [www.nationalcycle.com/register.html](http://www.nationalcycle.com/register.html)**

National Cycle hereby warrants to the original registered owner of a National Cycle polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windshield. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all National Cycle windshields.